

# RedKite®

## IMPORTANT KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep them for future reference.

Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet

Feed Me

Compact



\*Other colours available

Suitable for babies up to a maximum weight of 15 kgs who can sit upright and unaided.

Complies with BS EN 14988 – 1 & 2 + A1: 2012

Customer Care Line: 01454 326 568

## Parts list.

1. Main frame including tray, seat cover and seat support bar
2. Front legs x 2
3. Rear legs x 2



## Assembly instructions

Open the frame.

Fig 1a

Push the tray downwards on to the bar.

Fig 1b

Make sure the clamps are locked in place.

Loop the strap around the bar and secure with the press stud.

Fig 1c

Slot the seat support bar on to the back of the frame. Ensure the spring clips have come all the way through the holes.

Fig 2

Fig 1a



Fig 1b



Fig 1c



Clamp Strap Clamp

Fig 2



With the cover pulled all the way on to the frame, secure in place with the press studs. There are two inside the frame Fig 3a and four on the outside of the frame.

Fig 3b

Match up the corresponding letters on the legs, slot both sets of legs together Fig 4a and connect them to the main frame.

Fig4b

NOTE. The rear legs are longer in length and narrower at the top to the front legs. Please ensure the correct lengths are assembled together. The front legs have 'A' printed on them and the rear legs have 'B' printed.

To fold the highchair, undo the strap under the tray and firmly lift the tray up and slide the legs together. Please ensure the correct lengths are assembled together.

Fig 5

To secure and adjust the harness  
To secure your child in the harness, push the buckle prongs [A] + [B] into the buckle housing [C] until they snap into position. Adjust sliders to ensure a snug fit for your child. Repeat for the other side and also for the shoulder straps.

Fig 6

IMPORTANT! Always use the harness.

Fig 3a



Fig 3b



Fig 4a




Fig 4b



Fig 5



Fig 6

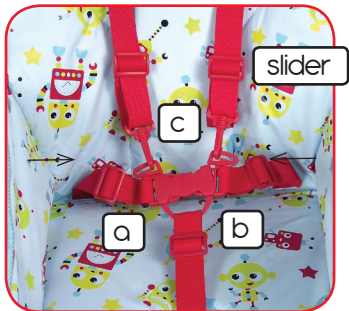

## General care:

- The correct use and maintenance of this high chair is essential.
- Always ensure the high chair is stored in a dry place to prevent mould or mildew developing.
- Avoid leaving your high chair in direct sunlight for prolonged periods of time as this may cause premature fading of colours.

## Cleaning:

- Metal parts may be cleaned with a damp cloth and wiped dry with a soft cloth.
- Clean the harness with a mild soap and water solution. Rinse and wipe dry.
- Clean plastic parts with a mild soap and water solution. Rinse and wipe dry.
- Do not use abrasive cleaners or bleach.
- The tray is not removable or dishwasher safe.

## Maintenance:

- Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the highchair immediately if any are found.
- Inspect all studs, nuts and screws for tightness. Check that all straps and harness attachment points are in good working order.
- Do not use replacement parts other than those approved by the manufacturer or distributor. Failure to do this may invalidate your warranty.

## Safety Warnings:

- **WARNING:** Your child's safety is your responsibility.
- **WARNING:** Do not leave the child unattended.
- **WARNING:** Do not use the high chair unless all components are correctly fitted and adjusted.
- **WARNING:** Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair. Never place the highchair near these items.
- Do not use for a child weighing more than 15 kgs.
- Only suitable for children who can sit unaided.
- Always use the 5 point harness provided. Ensure that it is correctly fitted and adjusted before each use.
- Adult assembly required. Always ensure that the high chair has been correctly assembled and that all locking devices have engaged before placing your child in the high chair.
- Ensure that all parts of your child's body are clear of the high chair when assembling, folding or making adjustments.
- Do not allow other children to play with this high chair. It is not a toy. Store safely out of reach when not in use.
- Never carry the high chair when the child is in it.
- Please lift your child in and out of the highchair. Do not allow children to stand on the footrest (where provided) and seat or to climb in and out of the high chair.
- Only use the high chair on a level floor surface.
- Never add accessories or fittings that have not been approved by the manufacturer.

This product complies with

Complies with BS EN 14988 – 1 & 2 + A1: 2012

For all technical queries please call:

01454 326 568

Imported by:

The Red Kite Baby Co Ltd

35 Lavenham Road

Beeches Industrial Estate

Yate

Bristol

BS37 5QX.

The logo for RedKite, featuring the brand name in a red, hand-drawn, sans-serif font. The letter 'i' in 'Kite' has a small red kite icon above it, and the letter 'e' has a small red kite icon below it. A registered trademark symbol (®) is located to the right of the 'i'.